











What to do if...
What to do if...

	A tire punctures	P. 564	If you have a flat tire
	The engine does not start	P. 577	If the engine will not start
		P. 101	Engine immobilizer system
		P. 584	If the battery is discharged
	The shift lever cannot be moved out	P. 579	If the shift lever cannot be shifted from P
	The engine coolant temperature gauge enters the red zone	P. 587	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 580	If you lose your keys
	The battery runs out	P. 584	If the battery is discharged
	The doors cannot be locked	P. 47	Side doors
		P. 50	Back door
	The horn begins to sound	P. 103	Alarm
	The vehicle is stuck in mud or sand	P. 590	If the vehicle becomes stuck

What to do if...



A warning light or indicator light comes on

P. 535

If a warning light turns on or a warning buzzer sounds...



nWarning lights



Brake system warning light

or



P. 535



ABS warning light

or



P. 536



Low fuel level warning light

P. 537



SRS warning light

P. 536



Open door warning light

P. 537



Charging system warning light

P. 535



Malfunction indicator lamp

or



P. 536



Driver's seat belt reminder light

P. 537



Front passenger's seat belt reminder light

P. 537



Master warning light

P. 537



Electric power steering system warning light

P. 536



Pre-collision system warning light

P. 536



Tire pressure warning light

P. 537



Slip indicator

P. 536